

# GALACTIC FIREBALL

Wireless Boomerang Drone with ON / OFF Remote




## USER MANUAL

### LEADING EDGE

For questions or concerns:  
info@leadingedgenovelty.com

## Product Overview

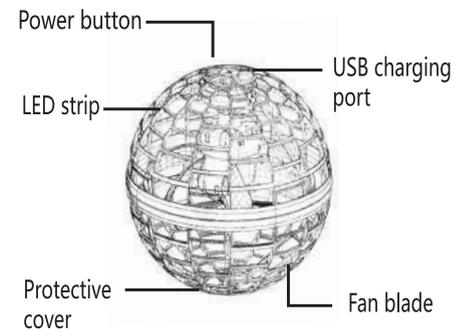

## Operating Modes

### Turn ON/ Turn OFF

Press the power button on top of the Galactic Fireball using your finger or use the pointed bottom end of one of the remotes to power the Fireball ON. You'll know the ball is ON when the LED strip lights, then in 3 seconds, the Galactic Fireball will automatically start spinning. Use the remote button to turn the Fireball spinning ON or OFF. In order to power off the Galactic Fireball completely, simply press the power button on top of the Galactic Fireball using your finger or use the pointed bottom end of one of the remotes to power the Fireball OFF completely. (DO NOT attempt to press the power button while the blades are spinning). You'll know the ball is powered OFF when the LED strip is OFF.

## Boomerang

Hold the Galactic Fireball (horizontal and vertical to the ground with "UP" facing up) with one hand. Tilt it slightly upwards 15° to 45° and throw it firmly away from you. The Galactic Fireball will fly back in the original direction. Hold the Galactic Fireball (horizontal and vertical to the ground with "UP" facing up) with one hand. Tilt it slightly upwards 15° to 45° and throw it firmly away from you to the upper left or upper right and the Fireball will fly out in an offset direction. It will then return using the offset reverse direction.  
**Tip:** When throwing your Fireball, the greater the tilt angle, the faster the flight speed. It is recommended to perform small-angle tossing exercises first, and then gradually perform larger-angle tossing exercises as your expertise improves.

## Levitate

Hold your Galactic Fireball (horizontal and vertical to the ground) with one hand, then release the rotating Galactic Fireball, place your palm on the bottom 1" - 5" ,and move slowly. The Galactic Fireball will float in the air will move slowly with the palm of your hand.

## Fly to the target

Hold the Galactic Fireball with one hand (horizontal and vertical to the ground),tilt it 15°to 65°downward toward the target, and release the rotating Galactic Fireball, and the Galactic Fireball will fly towards the target.

Hold your Galactic Fireball with one hand (horizontal and vertical to the ground) and tilt 15° to 65° to the left front or right front. Galactic Fireball will fly out of the left front or right front offset, and fly back to another target position in the offset direction.

## Remote Battery Replacement



Gently pry the two halves of the remote to expose the battery. Replace with **CR1220** Battery with the positive (+) facing up. After placing new battery in simply press the two halves back together. Properly dispose the dead battery.

## Product Details

Product name	Galactic Fireball
Color	Blue / Red / Chrome
Battery type	Lithium ion polymer battery - 3V
Main material	PP plastics
Charging time	About 25 minutes
Battery life	8-10 minutes
Suitable for age	Over 6 years old
Product Weight	27g
Product Size	95mm * 95mm * 95mm

## Precautions

1. This product contains a non replaceable battery. Please do not disassemble it or let the battery get damp.
2. If the toy is seriously warm, don't charge it. Let it cool before charging.
3. Please avoid strong impact and exposure to direct sunlight.
4. It is recommended to charge the Galactic Fireball under adult supervision.
5. Do not charge in an extremely hot or cold environment.
6. Keep away from flammable and explosive materials when charging.
7. Galactic Fireball should not be used by children under 6 years old.
8. Before playing Galactic Fireball, please fully charge before use, always make sure and "UP" is facing up during flight.
9. When playing outdoors, please avoid rivers, roads and buildings, etc. Always have a large ad safe place to fly.
10. Don't play with Galactic Fireball in bad weather such as rain,snow, thunder, electricity and strong wind, so as to avoid injury or damage to the product
11. Do not fly Galactic Fireball near light bulbs, light tubes, glass and other fragile products.
12. Never charge the product unattended for a long time. Disconnect the charger after the product is fully charged
13. To protect the battery life, please turn the power off your Galactic Fireball before charging.
14. NEVER charge overnight or unattended.