

SELF-FLYING UFO
HAND COMMAND CONTROL
Motion Controlled UFO



WARNING:
CHOKING HAZARD - Small Parts
Not for Children under 8 years old.
MADE IN CHINA

FLIGHT MANUAL AND INSTRUCTIONS

WARNING: Never leave product charging unattended for extended periods of time. Always disconnect SELF FLYING UFO from charger immediately after the SELF FLYING UFO is fully charged. Please refer to enclosed safety instructions.

**** NOT MADE TO BE USED OUTDOORS ****

PACKAGE CONTAINS:



SELF FLYING UFO





USB Charging cord



Flight Manual Instruction Booklet

8. Stop Flying

Stop the flying by gently grabbing the aircraft with your hand and flipping it upside down.

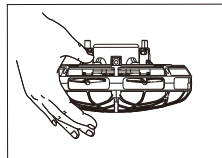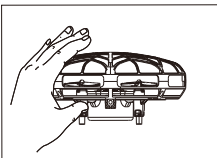

9. Charging

- If the aircraft's LED light turns red, it means it needs to be recharged. Stop flying and recharge.
- Full charge time is anywhere from 30 - 40 minutes. Only use the USB charge cord supplied with the aircraft.
- Never leave aircraft charging unattended.
- **** NEVER CHARGE OVERNIGHT ****.

10. Flight time

Flight time is about 5 minutes after a full charge, however it can vary depending on the flying environment.

1. Starting up




Press and hold the power switch until the green LED lights indicating the power is ON.

2. Power off

Press and hold the power switch until the green LED light goes out indicating the power is OFF.

3. Flight

- After the aircraft is ON, hold the aircraft in the palm of your hand (figure 1) and extend forward, then lightly toss the aircraft up and it will automatically take off.
- After the aircraft is flying, it will fly up and hover in the air. (figure 2)

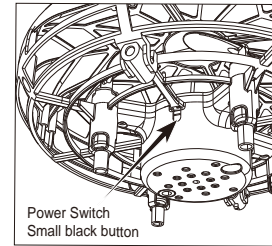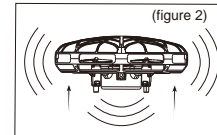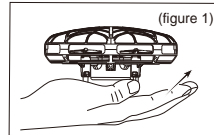

4. Flight Interaction

- Approach the bottom of the aircraft with a hand or object and the aircraft will ascend to a certain height and then hover again.
- Approach the sides of the aircraft with your hand or object and it will move in the opposite direction.
- The aircraft's normal operation will be effected if it encounters strong light, black objects and glass.

5. Flying Speed-Medium & High Speed Mode

The default speed is medium mode and the LED light is green. Click the power switch to advance to high speed mode and the LED light will turn blue. Click the power switch again and it will again be in medium speed mode.

11. Warnings

Do not use the aircraft in high wind or strong light.
Do not operate the aircraft in a narrow or cluttered environment.
Do not put any heavy object directly on the aircraft.

• Questions or concerns:
customerservice@leadingedge novelty.com Item # UFO-1

 
LEADING EDGE™

We Make the Coolest Stuff on Earth




6. Flight Calibration

If your UFO is flying erratically, you may need to calibrate the internal gyroscope sensor.



Turn on the UFO and hold it in your hand upside down. Double press the power button, and the indicator light starts flashing.

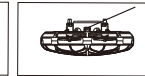



Set the UFO on a flat level surface and wait until the LED indicator light turns solid. Your calibration is complete.

7. Aerobatics

Perform stunts using the aerobatic mode.




FLIP :

While the aircraft is flying, place each hand on either side (figure 1). When you see the center LED flash, the aircraft is in aerobatic mode. Then place your hand under the bottom and the aircraft performs a flip (figure 2).

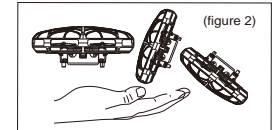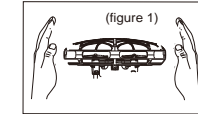

FLY AROUND :

While the aircraft is flying, place each hand on either side (figure 1). When you see the center LED flash, the aircraft is in aerobatic mode. Then place your hand to one side of the aircraft and it will complete (figure 2) a circle flight. (figure 3) When completed, it will exit aerobatic mode. To perform stunt again, repeat.

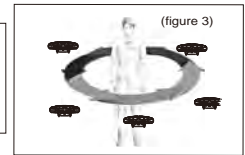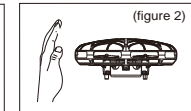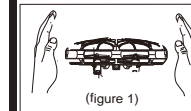

•Features

- Easy to launch and fun to play.
- Avoidance technology
- Hand Motion Control
- Crash Proof design for super durability.

Care and Maintenance

- to clean, gently wipe the UFO with a clean lightly damp cloth.
- Keep the UFO away from direct sunlight or heat.
- DO NOT submerge the UFO into water. This can damage the unit beyond repair.
- Parental guidance recommended

BATTERY WARNINGS

The UFO uses an internal Li-Poly rechargeable battery and is not replaceable. If the battery can no longer be charged, dispose of it properly according to local disposal requirements.

CAUTION: If the rechargeable battery leaks fluid, avoid contact with eyes and dispose of the UFO.

- RECHARGING SHOULD BE DONE UNDER ADULT SUPERVISION
- DO NOT DISPOSE OF BATTERIES IN A FIRE ! BATTERIES MAY LEAK OR EXPLODE.

Conforms to safety requirements of ASTM, CPSIA and FCC.

**** NOT FOR OUTDOOR USE ****